CWF 1500 RECESSED

CEILING RECESS | FITTING GUIDE

CWF 1500 – RECESSED CEILING INSTALLATION


Step by step instructions for fitting the CWF 1500 hand drawn track into a channel in the ceiling. Profile 20 × 13mm, max load 14kg.

1 Plan the channel



Agree the position before the ceiling is finished. The channel takes the 20 × 13mm profile, with a solid fixing (batten or joist) above for the screws.


2 Pre-drilled holes

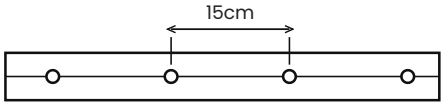

pre-drilled holes every 15cm


The track comes with holes pre-drilled every 15cm, so there is no need to drill the track. Screws are not supplied – choose screws to suit your ceiling.

3 Use the mounting tool

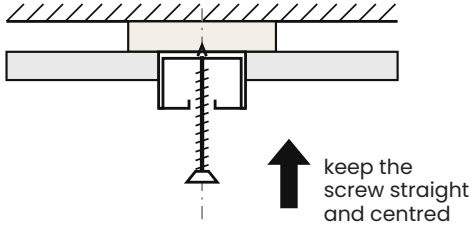

Use the CWF mounting tool supplied with your order. It keeps each screw straight and centred so it does not catch or damage the track.


4 Fix into the channel

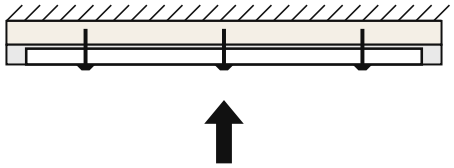

fix through every pre-drilled hole

Offer the track into the channel so it sits flush and fix through every pre-drilled hole. Do not overtighten.


5 Fit gliders and end stops

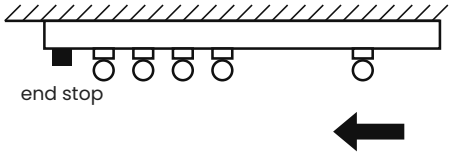

feed the gliders in from the open end

Feed the gliders in from the open end, then fit the end stops. Check every glider runs freely along the whole track.

6 Hang the curtain

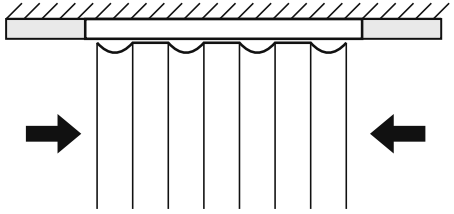

Hook on the curtain and draw it fully open and closed to check it runs smoothly from end to end.

Note: A screw driven in at an angle or too tight can distort the thin aluminium channel and the gliders will catch. Always fix through the pre-drilled holes using the mounting tool. Max load 14kg (halved on tracks with bends).